

Honeywell Voyager 1202g Single Line Laser Bar Code Scanner Setup Sheet



Reset to default:



DEFOVR.

Remove Custom Defaults



DEFAULT.

Activate Defaults



Reseat scanner to synch before continuing. Wait for 3 beeps, 4 ticks, then 2 more beeps. Continue scanning.

1)	 PREBK2. Add Prefix	Add ~ prefix
2)	 K9K	3)  K9K
4)	 K7K	5)  KEK
6)	 MNUSAV.	

Honeywell Voyager 1202g Single Line Laser Bar Code Scanner Setup Sheet



SUFCA2.

Sets Carriage Return



VSUFCR.



128MIN.



KOK

Sets 1 char minimum length



K1K



MNUSAV.

Finished!