

WDP Reader Setup Menu

Start Setup



RESET



End Setup



Barpad Table

0



1



 
2



3



4



5



~



126

7E

Code 3 of 9



- * 0) Enable Code 39
- 1) Disable Code 39
- * 2) Enable Full ASCII
- 3) Disable Full ASCII

Computer Interface



UPC and EAN



- * 0) Enable UPC/EAN
- 1) Disable UPC/EAN
- 2) Enable Supplements
- * 3) Disable Supplements
- * 4) Transmit UPC-A NSC

Data Transmission Timing



- * 0) None
- 1) Short
- 2) Short Med
- 3) Medium

2 of 5 Code



- 0) Enable 1 2of5
- * 1) Disable 1 2of5
- 2) Enable Check Digit
- * 3) Disable Check Digit

Beep Tone



- 0) Lowest
- 1) Low
- * 2) Medium
- 3) High
- 4) Highest
- 5) No Beep

2 of 5 Length



Wand 2 Digit Length
(Default is 06)

CLEAR




((Clears Preamble.Postamble...
Back to Default Settings))

Code 128



- * 0) Disable 128
- 1) Enable 128
- * 2) Disable UCC/EAN-128
- 3) Enable UCC/EAN-128

 Preamble



Wand up to 15
Characters From Full
ASCII Menu. Wand
"Set" when completed.

SET

